

CARE AND CLEANING

LG HI-MACS solid surfaces are stain-resistant, finished component products ideal for countertops, vanities, and other surfaces subject to the hazards of moisture and heavy wear. Even the most pristine areas won't succumb to coffee, ink or other stains. Because our product is made tough, it survives everything from careless pairing knives to busy life-styles. No special cleaning products are needed to keep our **LG HI-MACS** solid surface looking beautiful day in and day out.

While **LG HI-MACS** solid surfaces are extremely tough and durable, like any other fine material it can be damaged if abused or mistreated. Reviewing these care and cleaning instructions can assist you in understanding how easy it is to care for your new **LG HI-MACS** surface and how you can prevent more severe damage that may require special repairs. With little knowledge, you can enjoy the elegance and beauty of **LG HI-MACS** for years to come.

NORMAL CLEANING: **LG HI-MACS** Surfaces are non-porous so they can be wiped clean with a damp cloth or sponge and mild detergents or general purpose cleaners such as Mr. Clean®. If you have a matte finish, abrasive cleaners like Ajax® or Comet® may also be used. Periodically it may also be helpful to go over the entire surface in a circular motion with an abrasive cleaner or wet Scotch Brite® pad to maintain a uniform appearance.

SIMPLE PRECAUTIONS: Do not place hot pans directly from the burner or oven on the **LG HI-MACS** surface. Even though **LG HI-MACS** can withstand sustained temperatures up to 225 degrees F., Prolonged or extreme heat could cause yellowing. A trivet should always be used under heated appliances, such as crock pots, electric frying pans, etc.. Although minor cuts and scratches in **LG HI-MACS** can be repaired, deep cuts will require the services of a professional. Strong acids such as those found in drain cleaners, toilet bowl and oven cleaners should be used cautiously around **LG HI-MACS**. If these items are accidentally spilled, wipe them up at once. Some of these items, when left on the surface, may cause whitening, which can be difficult to remove.

SPILLS AND STAINS: While most everyday spills can be removed with the cleaning techniques listed, some troublesome spills and stains such as food dye, tea and fruit drinks may require more aggressive cleaning. These items can be removed with full strength bleach followed by general cleaner flushed with water. Note: Bleach should only come in contact with the surface for two to five minutes. On a factory matte finish, if you prefer, you can scrub with an abrasive cleaner. Even nail polish can be removed from **LG HI-MACS** with nail polish remover or an abrasive cleaner.

CIGARETTES: While **LG HI-MACS** will not burn, should a lighted cigarette accidentally come in contact with the surface it could leave a nicotine stain or scorch mark. Either of these can be removed by cleaning with an abrasive cleaner or buffing in a circular motion with a Scotch Brite® pad.

LG Solid Source, L.L.C.
8009 W. Olive, Peoria, Arizona 85345
Phone: (866) LG HI-MACS
www.lghi-macs.com



LG HI-MACS®
Acrylic Solid Surface